

All functions are non-floating unless specified otherwise

## Import & Viewing Board data

### Input Formats

#### CAD/CAM Formats

- DPF Input √  
*(job and layer)*

#### Netlist Formats

- MET Input √  
*Mania Electrical Test format (version 1 and 2)*
- IPC-D-356 and IPC-D-356A Input √

### SmartStart

#### Viewing

- Aperture Manager √
- Layer & Job Viewing √
- Query Manager √
- Measure tools √

## Tools and Process Information & Output

### Plotting, Scanning and CAD/CAM Output

#### Tooling

- Job-to-Printer, Screendump √
  
- FaultStation Communicator (distribution) option 9646217

#### Error-file Input Formats

- > ONE 'Free to choose' Error-file Input Format √
- Error-file Input of all Mania testers (Mania Data Log) option 9646181
- Error-file Input of Probot flying probe tester option 9646182
- Error-file Input of CircuitLine fixture based tester option 9646183
- Error-file Input of ATG fixture based tester option 9646184
- Error-file Input of ATG flying probe tester option 9646185
- Error-file Input of Luther & Maelzer fixture based tester option 9646186
- Error-file Input of Microcraft EMMA flying probe tester option 9646187
- Error-file Input of Viking fixture based tester option 9646188
- Error-file Input of Seica flying probe tester option 9646189